

Facial Spa with Aromatherapy Diffuser



VM720 Usage and Maintenance Instructions



INTRODUCTION

Thank you for purchasing the Facial Spa with Aromatherapy Diffuser.

READ ALL INSTRUCTION BEFORE USING - KEEP THESE INSTRUCTIONS IN A SAFE PLACE

RFFORF USF

- Carefully remove all packaging. Avoid using any knives or other sharp instruments as this may damage the
 product.
- Check the product for any visible damage. If you see any damage or suspect a fault, do not use your product, but contact your supplier for support.

SAFETY INFORMATION

DANGER: Do not dismantle: As with most electrical appliances, internal parts may be electrically live even when the switch is off.

- This appliance is for household use only
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children must not play with the appliance.
- Cleaning and user maintenance must not be made by children without supervision.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer
- For indoor use only.
- Do not use in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not place the mains lead beneath a carpet or rug.
- Never drop or insert any object into any opening.
- Unplug this appliance before filling. Fill reservoir with provided measuring cup. Fill water to "MAX" level.
 Do not overfill.
- Use the product only on a level surface. Do not place on soft surfaces.
- Never hold the unit close to your face in one position for an extended period, as this may cause scalding.
- Do not direct hot steam towards eyes or other heat sensitive areas. Always keep eyes closed when steaming the face.
- Disconnect from the power supply before emptying water from the unit.
- Base unit and attachments may be hot during use. Allow them to cool before handling. Persons insensitive
 to heat must be especially careful when using the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly
 qualified person in order to avoid a hazard.
- NEVER immerse the unit in water or other liquid for cleaning or other purposes.
- If, however, the appliance should fall into water, pull the power plug out of the power socket immediately.
 Never place your hand in the water. Have your appliance checked by a qualified electrician before using it again.
- Do not switch on the appliance when you Do not intend to use it.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

HEALTH CAUTION

- If you have any concerns regarding your health, consult your doctor before using this product.
- Discontinue use if you feel discomfort, or if any pain or irritation results, do not use on or near swollen or inflamed skin. In this case please consult your doctor or a medical professional first.
- The appliance may have a hot surface. Persons insensitive to heat must be careful when using the
 appliance.


TO STORE

- When not in use, unplug the unit. Allow the appliance to cool and store out of reach of children in a safe, dry location.
- Never wrap the cord around the appliance as this may cause the cord to wear prematurely and break.
- Handle the cord carefully for long life, and avoid jerking, twisting or straining especially at plug connections.

INSTRUCTIONS FOR USE

- Clean your face as you do for your daily skin care routine. Gently apply your favourite moisturiser or eye
 cream
- 2. Place the unit on a dry, level surface and remove facial mask from base by lifting it.
- 3. Fill the measuring cup to the "MAX" level using warm tap water.
- 4. Pour distilled water into the reservoir. (Using tap water may leave a stain on reservoir).
- 5. Place the mask back onto the base, taking care to locate it into position.
- Plug unit into a power socket and switch the unit to the ON position. It will take approximately 3 to 4 minutes for the steam to develop.
- Sit down, close your eyes and place your face gently against the rim of the facial mask. Do not lift the unit to your face.
- 8. For extra steam, place a towel over your head so it covers the sides of the Facial Spa.
- 9. Move your face occasionally and blot with a cool, damp towel.
- 10. Steam for at least 5 minutes, but no longer than 10-15 minutes.
- 11. Immediately after steaming rinse your face with warm water then splash your face with cool water or use your favourite tone/astringent to close pores and seal in moisture.
- 12. When the unit runs out of water turn if off immediately or turn it off prior to the unit running out of water and allow it to cool down before emptying.

PARTS AND ACCESSORIES

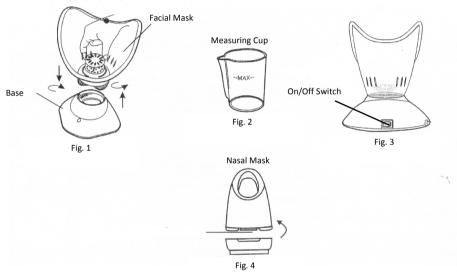

CLEANING

Your appliance is designed for household use and is virtually maintenance free. Clean the appliance after each time you use it to prevent dirt and residues from accumulating and ensure that all vents and openings are kept clear of dirt and dust.

- 1. Always turn off and unplug the unit from the outlet before cleaning.
- 2. Empty excess water from the reservoir and wipe dry the interior of the facial mask and around the rim of the opening. Wipe the base and exterior with a clean, damp cloth.
- 3. Never let water run close to the switch at the base.
- 4. Never immerse the base in water.

If any malfunction occurs, unplug the appliance, allow it to cool and return it to your retailer in the first instance.

GENERAL SAFETY

Domestic wiring must be tested periodically by a qualified electrician at least once every 10 years or at every change of occupancy. For office and retail premises, and buildings such as village halls, the wiring must be inspected at least once every 5 years. It is recommended that all buildings be fitted with smoke alarms (it is mandatory for new buildings).

PAT TESTING

This product is not for commercial use. We recommend that it is PAT tested annually when used in a domestic environment

MAINTENANCE

If the mains lead is damaged, it must be replaced by the manufacturer or an authorised service centre.

If the mains plug needs to be replaced, proceed as follows:

- Connect the brown wire to the terminal labelled "L".
- Connect the blue wire to the terminal labelled "N".
- Make sure that the cord-grip is positioned correctly (over the outer sheath of the cable) and it fully tightened.

Fuse 3A Weyling Live (Brown)

DISPOSAL AND RECYCLING



You must not dispose of this appliance with domestic household waste.

Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user. When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

IMPORTANT INFORMATION

The information given in this instruction booklet must not be taken as forming part of or establishing any contractual or other commitment by Aidapt Bathrooms Limited, Aidapt (Wales) Ltd or its agents or its subsidiaries and no warranty or representation concerning the information is given.

Please exercise common sense and do not take any unnecessary risks when using this product; as the user you must accept liability for safety when using the product.

 $Please\ do\ not\ he sitate\ to\ contact\ the\ manufacturer\ (detailed\ below)\ if\ you\ have\ any\ queries\ concerning\ the\ assembly/use\ of\ your\ product.$

SERVICE WARRANTY

Aidapt Bathrooms Limited guarantees the product free from defects in materials and workmanship for a period of 12 months

Should this appliance be operated under conditions other than those recommended, at Voltages other than the Voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations.

This warranty is in addition to, and does not affect, your statutory rights.

Our guarantee is administered by our retailers.

If your product arrives damaged or fails within the guarantee period, in the first instance you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the email you received when you placed the order.

If you have just received your product and require techical help in using it or have any other technical queries, please call our Customer Service Team on 01744 745 020.

Pure-Fit Spa products are distributed by:

Aidapt Bathrooms Ltd, Lancots Lane, Sutton Oak, St Helens, WA9 3EX
Telephone: +44 (0) 1744 745 020 • Fax: +44 (0) 1744 745 001 • Web: www.aidapt.co.uk
Email: accounts@aidapt.co.uk • adaptations@aidapt.co.uk • sales@aidapt.co.uk